
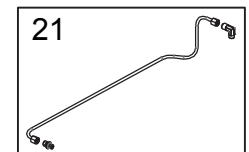
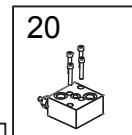
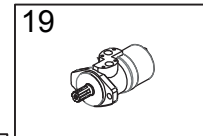
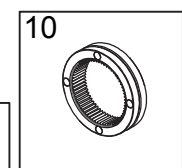
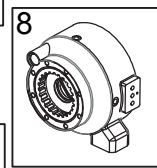
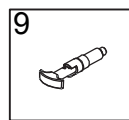
 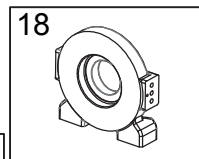

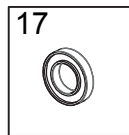
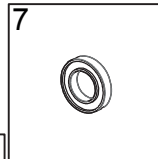
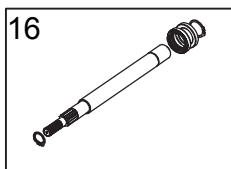
 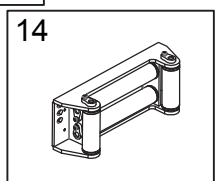

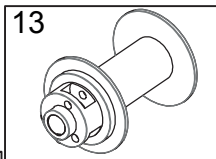
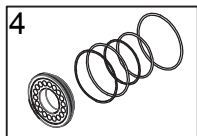
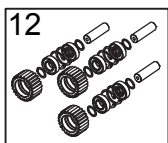
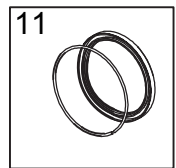
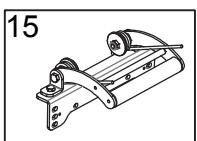
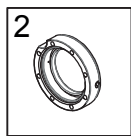


HMW 5.0 PHT-EN

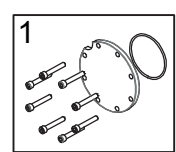

No	Part List	Code
1	Brake Cover	A046Y10
2	Brake Body	A038
3	Brake Spring	A044
4	Brake Piston	A043Y09
5	Brake Disc and Bearing	A032Y08
6	Brake Gear	A034
7	Body-1 Bearing	A005
8	Body-1	A001
9	Manuel Clutch Shifter	A088Y07
10	Ring Gear	A006
11	Ring Gear Segment and Oil Seal	A008Y12
12	Planetary Gear Box	A013Y11
13	Spool	A011Y04
14	Roller Fairlead	A048Y05
15	Cable Tension	A061Y06
16	Connection Shaft Kit	A021Y03
17	Body-2 Bearing	A020
18	Body-2	A019
19	Hydraulic Motor Kit	A077
20	Over Center Valve	A081Y01
21	Installation Tube	A086Y02