


HMW 11.5 PHT-EN

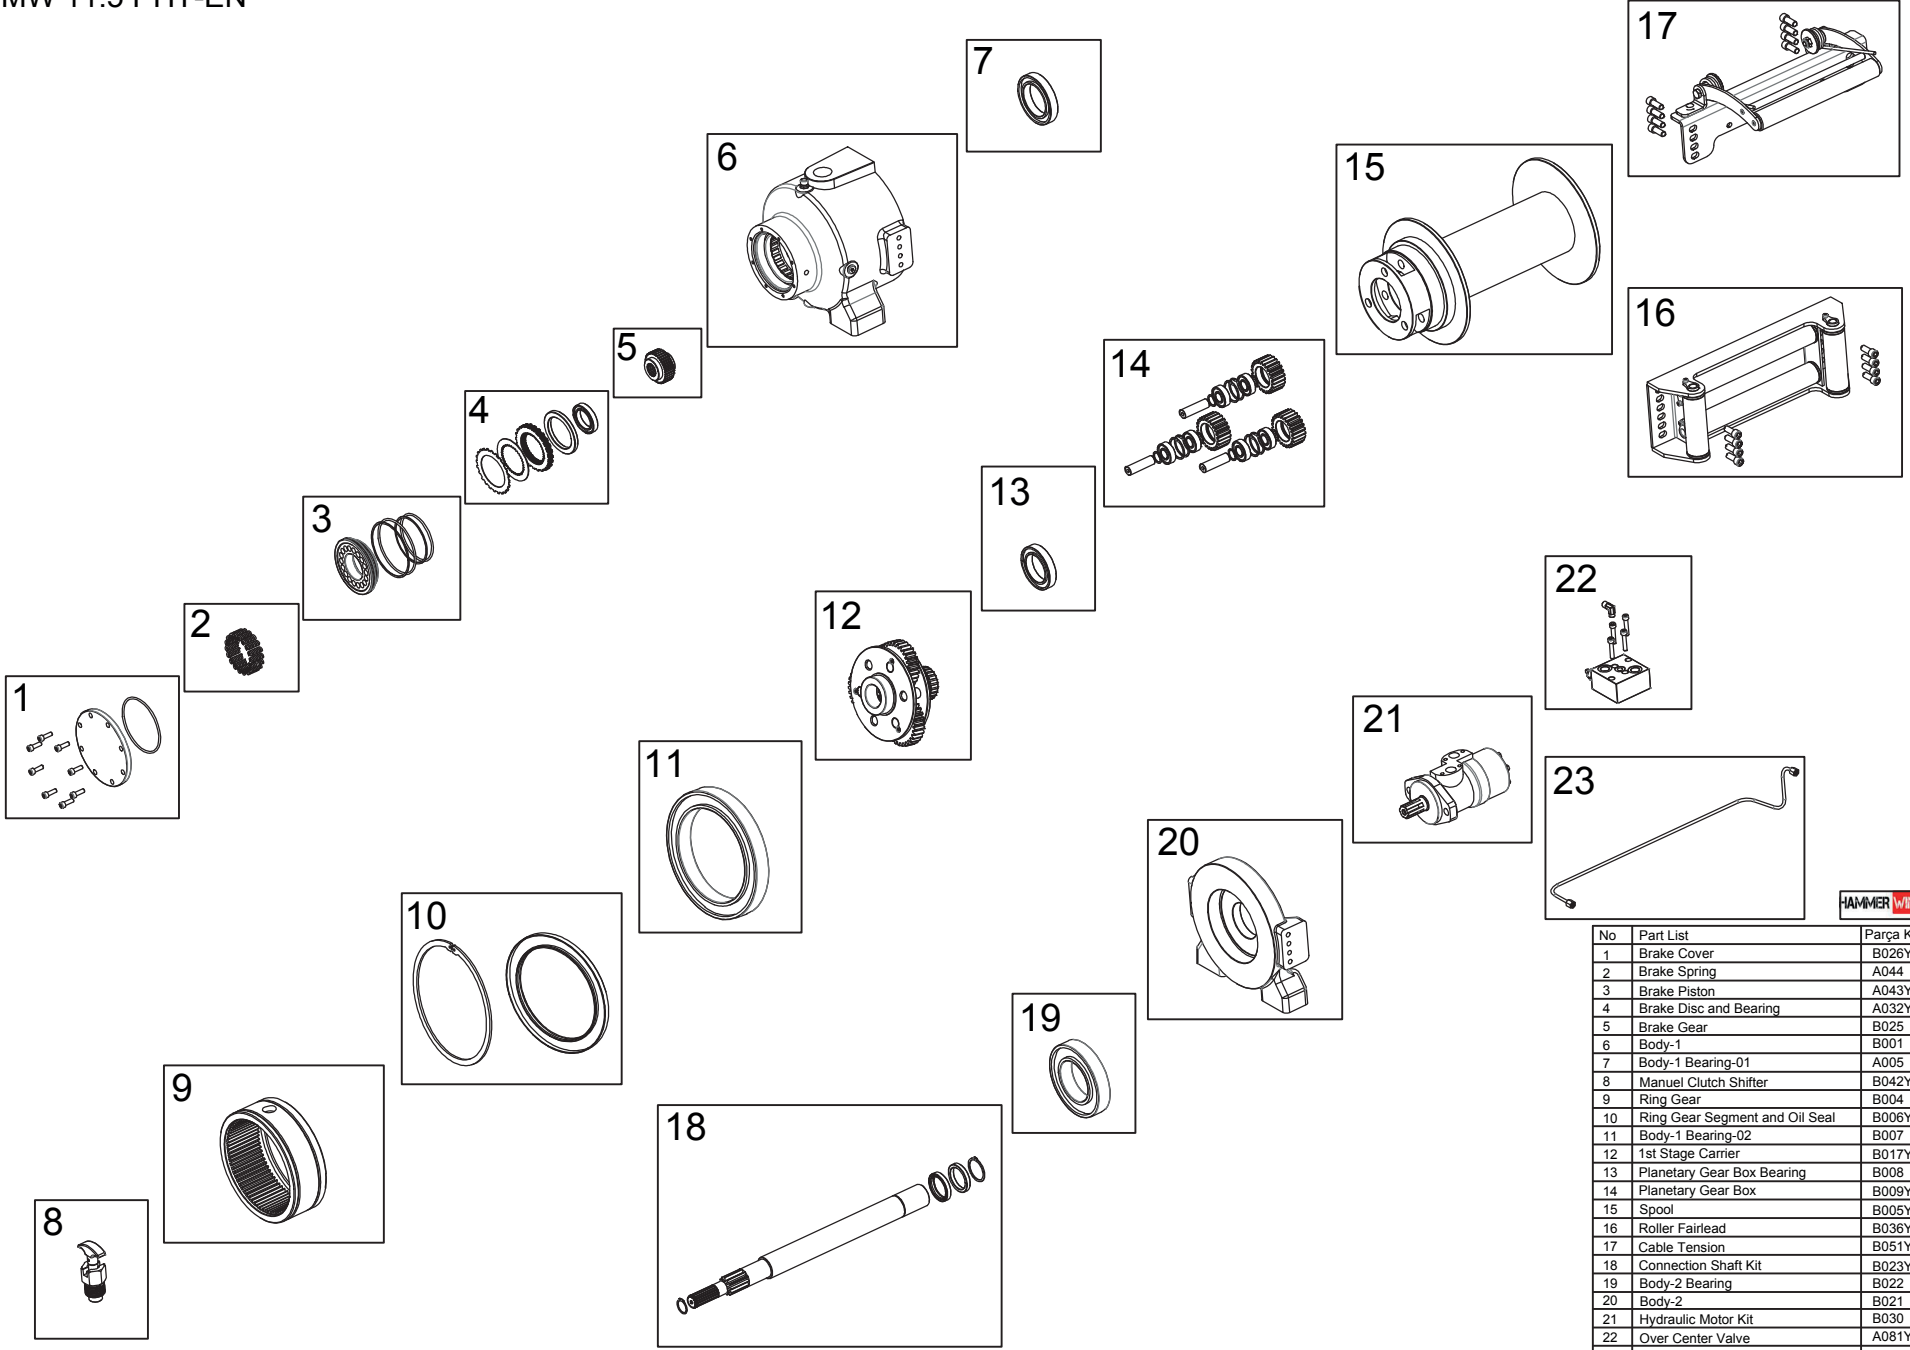

No	Part List	Parça Kodu
1	Brake Cover	B026Y10
2	Brake Spring	A044
3	Brake Piston	A043Y09
4	Brake Disc and Bearing	A032Y08
5	Brake Gear	B025
6	Body-1	B001
7	Body-1 Bearing-01	A005
8	Manuel Clutch Shifter	B042Y07
9	Ring Gear	B004
10	Ring Gear Segment and Oil Seal	B006Y12
11	Body-1 Bearing-02	B007
12	1st Stage Carrier	B017Y13
13	Planetary Gear Box Bearing	B008
14	Planetary Gear Box	B009Y11
15	Spool	B005Y04
16	Roller Fairlead	B036Y05
17	Cable Tension	B051Y06
18	Connection Shaft Kit	B023Y03
19	Body-2 Bearing	B022
20	Body-2	B021
21	Hydraulic Motor Kit	B030
22	Over Center Valve	A081Y01
23	Installation Tube	B033Y02